

# Motorola

- [Setting up Dummy and LogCollector for a TETRAPack connection](#)
- [EBTS](#)
- [Dummy](#)
- [CTS Log Collector](#)
- [MTS](#)
- [CTS Updater](#)
- [CTS](#)

# Setting up Dummy and LogCollector for a TETRAPack connection

## Disclaimer

- Please note you follow this guide at your own risk! This is an experimental bridge, and we can't be held responsible if anything bad happens to your precious CTS!
- This guide is for a Single-BS (one CTS) subnet. If you wish to interconnect more CTSes locally, you'll need to modify the network topology + E1 time slotting accordingly.


## Hardware requirements

- Raspberry Pi (4 is ideal, 2GB is ok), with PSU and SD card
- icE1USB
- A USB-Ethernet Adapter
- A CTS (DUH)

## Prep work

- Make sure you understand how TetraPack works, its topology, how Dummy and LogCollector operate with each other, etc.
- Before going any further, [read this!](#)

- Open up the icE1USB (fr

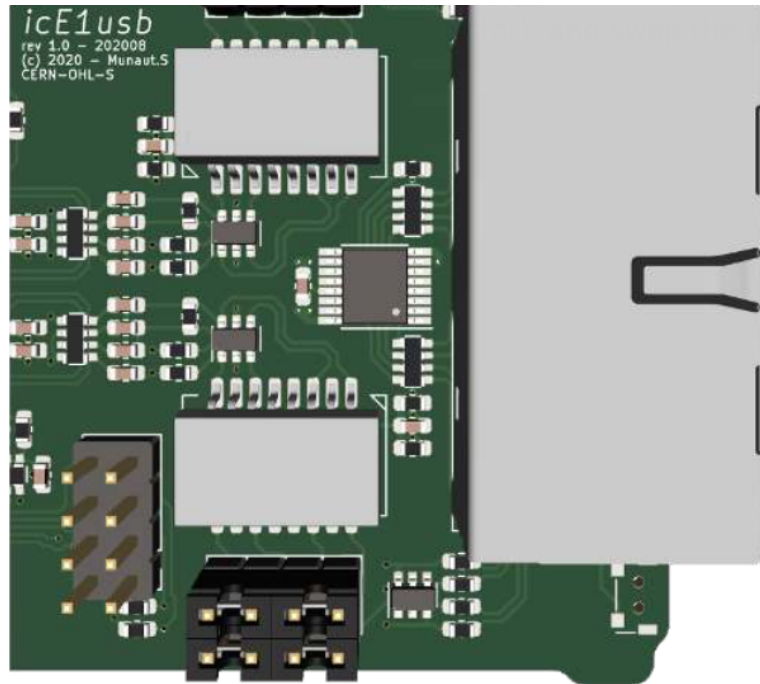

npers so

they match this picture: **NT mode**

## CTS Setup

1. Get a clear view of how the CTS is configured, and its necessary configuration files: bssparams.txt, set\_x\_gp, gm, sc, sub.csv, etc. Please make sure everything works as a standalone site before starting this entire endeavour!
2. You also need good way to remotely connect to the CTS management interface (VNC is a good option).
3. Plan ahead and make a list of the BrandMeister TGs you want your CTS to handle. Add them already to set\_x\_gp and gm.csv, reboot everything and make sure they already work locally in standalone mode.
4. Open up bssparams.txt on your CTS, and do the following edits. Don't change anything else at this state:

```
## Base-Station Parameters
#####
###
#### Set the name to something simple, short, no special caracters
/base-station/name = "CTSBS";
#### set this to id 1
/base-station/base-station-id = 1;
```

```
#### add or replace:
/base-station/standalone-mode = false;

#### add or replace:
/base-station/use-local-site-fall-back = false;


## Air Interface BLE Parameters
#####
/base-station/BLE/neighbour-cells = 191;


## SDS Gateway Parameters
#####
####
#### Remove all other lines, replace by:
/system/sds-gateway/host-1 = { issi = 262999; ip-address = "44.225.64.18"; };
/system/sds-gateway/host-2 = { issi = 250999; ip-address = "44.225.64.19"; };
/system/sds-gateway/host-3 = { issi = 16777184; ip-address = "44.225.64.20"; };
# These ISSIs will be used for SMS and GPS services (via GWPC emulation, IP addresses don't matter)


## E1 Layout Parameters
#####
####
#### Remove all other E1 layout lines, and replace byt this:
/network/E1-layout/time-slot-01 = { source-type = "SIGNALLING"; };
/network/E1-layout/time-slot-02 = { source-type = "SIGNALLING"; };
/network/E1-layout/time-slot-03 = { source-type = "SIGNALLING"; };
/network/E1-layout/time-slot-04 = { source-type = "SIGNALLING"; };


#### Real BS transceivers
/network/E1-layout/time-slot-17 = { source-type = "BS"; base-station-id = 1; l-transceiver-id = 11; };


#### Dummy's emulated BS transceivers
/network/E1-layout/time-slot-22 = { source-type = "BS"; base-station-id = 8; l-transceiver-id = 11; u-
transceiver-id = 12; };
/network/E1-layout/time-slot-23 = { source-type = "BS"; base-station-id = 8; l-transceiver-id = 13; u-
transceiver-id = 14; };
/network/E1-layout/time-slot-24 = { source-type = "BS"; base-station-id = 8; l-transceiver-id = 15; u-
transceiver-id = 16; };
/network/E1-layout/time-slot-25 = { source-type = "BS"; base-station-id = 8; l-transceiver-id = 17; u-
transceiver-id = 18; };
```

```
#### Dummy's emulated GWPC encoders
```

```
/network/E1-layout/time-slot-26 = { source-type = "DISP"; };
```

```
/network/E1-layout/time-slot-27 = { source-type = "ISDN"; };
```

```
/network/E1-layout/time-slot-28 = { source-type = "ISDN"; };
```

```
/network/E1-layout/time-slot-29 = { source-type = "ISDN"; };
```

```
/network/E1-layout/time-slot-30 = { source-type = "ISDN"; };
```

```
## Network Topology Parameters
```

```
#####
```

```
#### Remove all other network topology parameters, and replace by this. Don't forget to change  
CTSNAME to the same name as in line 3!
```

```
/network/topology/gateway-pc    = { name = "Gateway Server"; E1-connection-1 = "BS-8"; };
```

```
/network/topology/base-station-1 = { name = "CTSBS"; E1-connection-1 = "BS-8"; };
```

```
/network/topology/base-station-8 = { name = "DUMMY"; E1-connection-1 = "BS-1"; E1-connection-2 =  
"GW-PC"; };
```

5. Save and reboot the CTS, make sure it still works.
6. Copy bssparams.txt over to your local PC, you'll need it for your Raspberry Pi.
7. Write down the IP address of your CTS BSC computer (mine was 10.10.15.31, but yours will probably be different).

## Software Stack Install

1. Prepare an SD card with a 64-bit Raspbian Bookworm (Debian 12)
2. Update/Upgrade the OS after boot:

```
sudo apt update && sudo apt upgrade  
reboot
```

3. Add the Osmocom repo, as per [Osmocom's documentation](#):

```
sudo su  
OSMOCOM_REPO="https://downloads.osmocom.org/packages/osmocom:/latest/Debian_12"  
wget $OSMOCOM_REPO/Release.key  
mv Release.key /etc/apt/trusted.gpg.d/osmocom-latest.asc  
echo "deb [signed-by=/etc/apt/trusted.gpg.d/osmocom-latest.asc] $OSMOCOM_REPO/ ." >
```

```
/etc/apt/sources.list.d/osmocom-latest.list  
apt update
```

4. Install Osmocom E1D:

```
sudo apt install osmo-e1d
```

5. Add the TetraPack repository:

```
wget https://packages.tetrapack.online/install/public.key  
mv public.key tetrapack.asc  
sudo apt-key add tetrapack.asc  
sudo echo "deb [arch=arm64] http://packages.tetrapack.online/repository/ bookworm main" >  
/etc/apt/sources.list.d/tetrapack.list  
sudo apt update
```

6. Install TetraPack dummy and cts-logcollector

```
sudo apt install tetrapack-dummy cts-logcollector
```

7. Plug in the icE1USB to your Rpi, recover the interface serial number:

```
sudo lsusb -d 1d50:6145 -v 2> /dev/null | grep iSerial
```

8. Open (with for instance nano) /etc/osmocom/osmo-e1d.cfg, copy/paste this:

```
log syslog daemon  
e1d  
interface 0 icE1usb  
  usb-serial [interface serial number]  
line 0
```

9. Reload the service:

```
sudo systemctl restart osmo-e1d
```

## Dummy - E1 Link setup

1. Make sure Dummy is off with:

```
sudo systemctl stop dummy@default.service
```

2. Open/Create /opt/TetraPack/bssparams.txt, and copy/paste the contents from the file created at the CTS setup step. Edit the following lines

```

## System Parameters
#####

#####

### Edit/Replace
/system/name = "DUMMY";

## Base-Station Parameters
#####

###

### Edit/Replace
/base-station/name = "DUMMY";
/base-station/base-station-id = 8;

```

### 3. Open/Create /opt/TetraPack/default.env

```

# E1D interface and line in format [interface number].[line number]
DUMMY_LINE=0.0

# Path to CTS topology file (bss3.txt or bssparams.txt)
DUMMY_TOPOLOGY=/opt/TetraPack/bssparams.txt

# IP address and mask for CTS VTUN interface
DUMMY_NETWORK="192.168.0.8 mask 255.255.255.0"

# Specific options (multiple values can be delimited with comma):
# replace-forwarded-link-status - replace IP-forwarded status for both E1 lines status of local
BSs/GWPC to up
# emulated-bs-line1-down      - set E1-1 status of emulated BS to down
# emulated-bs-line2-down      - set E1-2 status of emulated BS to down
# emulated-gwpc-line1-down    - set E1-1 status of emulated GWPC to down
# emulated-gwpc-line2-down    - set E1-2 status of emulated GWPC to down
DUMMY_OPTION=

# Server connection URI in format http(s)://[user]:[password]@[address]/[path and parameters]
# If you care about securely stored password, please put credentials into /opt/TetraPack/.netrc (man
netrc)
# REPLACE <YOUR DMR-ID> and <YOUR HOTSPOT/REPEATER PASSWORD> with your radio ID and

```

```
password :)
```

```
DUMMY_CONNECTION="http://<YOUR DMR-ID>:<YOUR HOTSPOT/REPEATER  
PASSWORD>@core.tetrapack.online:8081/dummy/?mode=bs+gwpc"
```

```
# Instance name for D-BUS IPC interface
```

```
DUMMY_INSTANCE=default
```

4. Save everything, cross your fingers and connect E1.1 from your BSC to the left port of icE1usb, like so:



5. The matching LED on the port should stop blinking, and the red LED on E1-1 should turn off.
6. Try to start dummy from the console:

```
cd /opt/TetraPack  
./run.sh default.env
```

```
# First, read startup messages and check that configuration (default.env and bssparams.txt) parsed  
successfully
```

```
# Second, check connection: if you see, in blue, "Q.921 connection established", congratulations!
```

Your E1 link works!

# You should also see "Socket Connection Established" - this means, connection to server established

7. If everything works, Ctrl+C to stop the console instance, and enable the service + start it

```
sudo systemctl start dummy@default.service
```

## LogCollector - CTS Management interface setup

1. Connect the USB/Ethernet interface to the Pi, and connect an Ethernet cable from BSC management port to the usb dongle.
2. Stop LogCollector:

```
sudo systemctl stop cts-logcollector@default.service
```

3. Set a static IP on the interface (probably eth1) on the same range as the BSC, by editing /etc/dhcpd.conf and adding this:

```
# Don't forget to edit your ip address to match the range of your BSC!
interface eth1
static ip_address=10.10.15.20
static routers=10.10.15.1
```

4. Test if you can connect via telnet:

```
telnet [BSC IP ADDR] 51600
#If you get "220 Network Management Interface is ready.", you're good to go!
```

5. Through that telnet interface, you can check if you got a good E1 link with Dummy:

```
login a
cd network
netstat
#Look at the table that pops up, and focus on the "Links" column
#260-rsp
#260-Node  Links  DD   AI  ISDN  DISP
#260-----
#260-BS-1   u -   u   u   -   -
#260-BS-2   ??   ?   ?   -   -
#260-BS-3   ??   ?   ?   -   -
```

```
#260-BS-4   ? ?   ?   ?   -   -
#260-BS-5   ? ?   ?   ?   -   -
#260-BS-6   ? ?   ?   ?   -   -
#260-BS-7   ? ?   ?   ?   -   -
#260-BS-8   u u   u   u   -   -
#260-GWPC   d u   u   -   u   d
```

#260-

#260 .

#BS-1 should have first link on U, BS-8 should have both U, and GWPC should have D U

#If it's not the case, check the topology with:

cd topology

ls

#Should show this:

#260- d-- gateway-pc

#260- d-- base-station-1

#260- d-- base-station-8

#If not, check your bssparams.txt on both the CTS and the Pi, something is wrong.

6. Close the Telnet session (Ctrl+c), open /opt/LogCollector/default.env, and change the ip address:

```
# [IP of basestation] [dummy instance name] [basestation ID (1-8)]
COMMAND_ARGUMENTS=[YOUR BSC IP] default 1
```

7. Enable/Restart LogCollector, wait for a bit and see if you get data coming from the CTS when you place a call or attach to a group:

```
sudo systemctl enable cts-logcollector@default.service
sudo systemctl start cts-logcollector@default.service

#Let's monitor syslog to see if it recovers logs from the CTS. You should see a bunch of lines show up.
tail -f /var/log/syslog | grep cts
```

8. If it works, great! LogCollector is ready. Ctrl+C to quit tail, carry on to the rest

# EBTS

## Introduction

Currently the Motorola Enhanced Base Station (EBTS) alone is quite limited feature-wise: only simplex group calls, no SDS, no status calls, no packet data - The Connection to our Virtual Core does however remove some of the following issues with LST

1. No LST! (No Red Lights on TSC, and No Annoying Notification on the Front of your Radios)
2. Network Wide Group Calling - TGS Configured in our Core are Routed between ALL Linked BTS Sites
3. Local Site Private Calling - Having a Linked site allows for 1-1 Private Calling (NOT FULL DUPLEX). Simply Dial the ISSI Number of the radio you wish to dial and hit PTT, this will call the radio and establish a 1-1 Call
4. Wide Area Private Calling - As Above, Just across the network! - Call your buddies across the world via their ISSI Number.

The aim of this guide is to help you get your EBTS connected to our Virtual Core, and enjoy all TETRA features (+ TPC interconnects, coming soon™).

## Disclaimer

- Follow this guide at your own risk! This is an experimental bridge, and we can't be held responsible if anything bad happens to your precious EBTS!
- Supplied Configurations for Cisco Connectivity are Examples/Known Working Configurations, it is down to the Site Sysop to Secure their own System from unauthorised access

## Prep Work


- Before starting this endeavor, get in touch with the Core Network Team, you'll need some specific configurations files for your site (Cisco and EBTS)

- You must have a basic understanding of the TETRA standard (how it behaves, how to program radios with MCC/MNCs, add talkgroups).
- Modifications on the EBTS settings will also be needed, make sure you're also feeling at ease with that.
- Some Linux Console knowledge as well as basic Cisco usage will also come in handy.


# Connection methods

## Option 1 - Cisco router

- A working EBTS/MBTS setup in lone site trunking mode (bare minimum: Base Radio + Site Controller). Don't forget an RS-232/USB converter if your computer doesn't a native DB9 connector!
- Raspberry Pi. You can also use a Mikrotik router, but this is not documented here (you'll need to install and configure ZeroTier, and bridge it to a LAN port).
- Cisco 1900 Series router + E1 Card (either one or two ports, both will work). You'll also need an additional Ethernet USB Dongle for the Pi. Make sure you also have a console cable.
- An E1 Crossover cable (RJ45 plugs). Schematic is as follows:

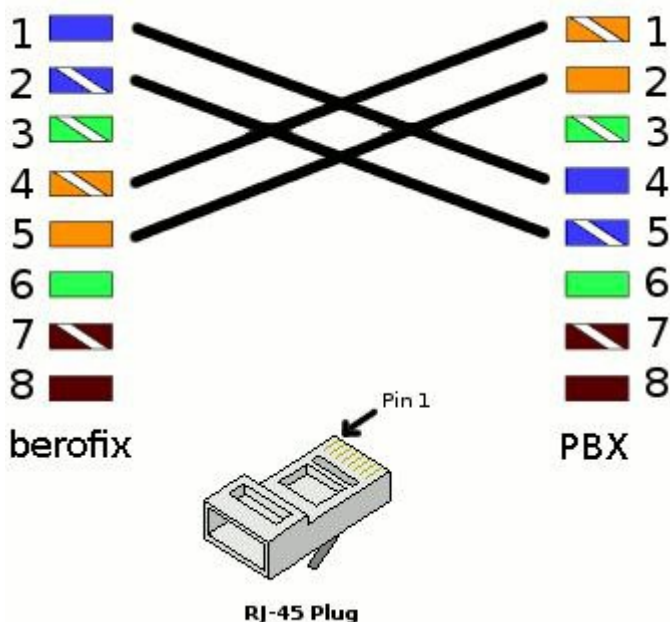

The complete setup will look like this:

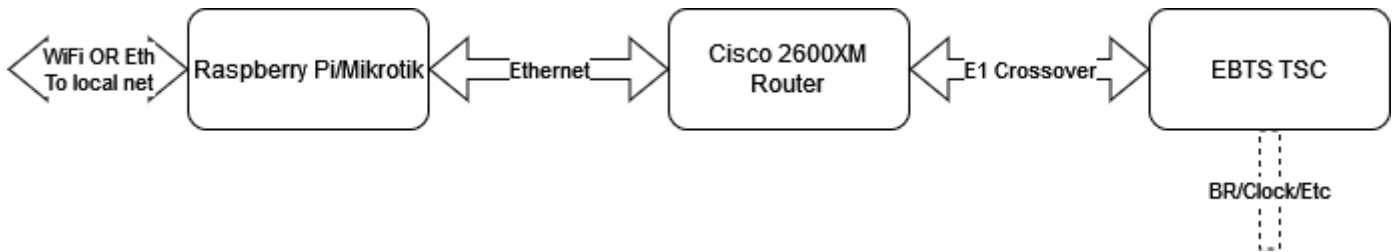

## Raspberry Pi Setup

1. Prepare an SD Card with a 64-Bit version of Raspberry OS Lite(Bookworm being the latest, We Don't Need a GUI). Don't forget to configure SSH and WiFi if you plan to use it. You can also use an additional USB/Ethernet dongle instead of Wifi (you'll need an available ethernet port to connect to the Cisco Router either way).
2. Update/Upgrade the OS after boot:

```
sudo apt get update && sudo apt upgrade
reboot
```

3. Download and run the following configuration script. This will create the bridging interface, and add you to the ZeroTier network:

```
wget https://packages.tetrapack.online/install/tools/EBTS/CiscoBridge.sh | sudo bash
```

4. Connect the USB-Ethernet dongle if needed, and reboot. Connect the Cisco Router FastEthernet0/0 port to the dongle, and your WAN network to the Pi's onboard jack (or to the main Pi Ethernet jack if you're using Wifi to get online).

Sometimes the Pi will pick either the internal Eth or the Dongle Eth to be Eth0. If you notice that you cannot get a connection via your LAN to the Pi, try swapping the connection to the Cisco over.

## Cisco Router Setup

1. Connect your computer to the Console port of the router (via either an USB/RS232 adapter or a native DB9 port if you're lucky enough to still have one). Open up your favourite terminal program (I personally use putty) at 9600 baud.
2. [Follow these steps to reset your router to factory defaults.](#)
3. Once you finish step 8 on this before-mentioned guide, type "no" then enter.
4. Check your Firmware Version:

```
show version
```

```
Cisco IOS Software, C2600 Software (C2600-IPBASEK9-M), Version 12.4(12), RELEASE SOFTWARE (fc1)  
is Required
```

5. If you see any other version than what's mentioned above, reach out to one of the Core Network Team to update it.
6. Open the Cisco Router config file you received (see "Prep Work") and copy its content (Ctrl+C). Enable the console and enter configuration mode:

```
config t  
Ctrl+V (paste)  
end  
write mem
```

7. Once done, you should be able to ping the Core via:

```
ping 192.168.250.254
```

8. Almost there! If for some reason your FastEthernet0/0 interface didn't go up, type:

```
config t  
int Fast0/0  
no shutdown  
end  
write mem
```

## Option 2 - icE1usb interface

Please read article [FrameRelay-over-E1 Daemon \(FRED\)](#)

After FRED install please edit /opt/FRED/default.env and run following command:

```
sudo /opt/FRED/dimetra-setup.sh
```

## EBTS Site Controller

1. Connect a USB/RS232 (or native DB9, again) from your computer to the service access port of the TSC. Open up BTS Service Software (aka TESS), select Dimetra R8. Password is Sys\*mgr123\$%. Under Configuration ==> Direct Settings, make sure you selected the right COM Port.

2. Select Connection ==> Connect Direct. Turn on the TSC and wait for it to boot up completely. If it's already on, just press on enter, you should get a prompt for a user/password. Defaults should be factory/factory.
3. Select Upload Configuration, and download the latest file from the Site Controller. Once done, close the connection via Connection ==> Close Connection.
4. Open the TSC Configuration file you just pulled via File ==> Open. Edit the Site Configuration via Personality ==> Modify. Click on "Edit Site Controller"
5. From the Core Team, you should have received the following data: Site ID, BTS IP Address,

6.

The image displays two side-by-side screenshots of the 'Site Controller <Modified>' configuration window. The left window shows the 'General' tab with the following fields: BTS Site ID (SITE ID), BTS Zone ID (1), Internal Codeplug Debug (unchecked), LST Enable (checked), TSC Temperature Threshold (C): (70), EAS Poll Timer (secs): (5), Site Trunking Hold off Time (secs): (0 sec), Site Link Debounce Time: (2), No Trunking BS Service Details: (All services), and Adjacent Site Broadcast Update: (checked). The right window shows the 'Addresses' tab with the following fields: Link Recovery Timer (secs): (5), Control Channel DLCI: (101), Packet Data DLCI: (102), Network Manager DLCI: (104), Short Data Transport DLCI: (103), Zone Controller IP Addresses: Primary ZC IP Address: (10 . 1 . 231 . 1), Secondary ZC IP Address: (10 . 1 . 232 . 1), ZC IP Address One: (10 . 101 . 0 . 1), ZC IP Address Two: (10 . 201 . 0 . 1), and BTS IP Address: (BTS IP ADDR). Both windows have 'OK', 'Cancel', and 'Help' buttons at the bottom.

BTS SDTS IP Address: 10 . 101 . 64 . 3

SDR Outbound TCP Port Number: 4176

SDR Inbound TCP Port Number: 4177

SDR TCP Port Number: 4176

SLM Max Transmission Unit (Bytes): 128

Max Number of Short Data Repeats: 4

Max Number of Short Data Retries: 5

Max TCP Segment Size (Bytes): 512

TCP Socket Buffer Size (Bytes): 8192

OK

Cancel

Help

Data Tx Request Transmissions: 4



End of Data Transmissions: 4

Initial Transmissions on PDCH: 4

BTS PD IP Address: 10 . 101 . 64 . 2

PD Gateway IP Address: 0 . 0 . 0 . 0

PD Port Number: 10130

RNG IP Address: 10 . 128 . 105 . 15

OK

Cancel

Help

Site Controller <Modified>

Network Management		Site Router		Site Link
General	Site Reference	Addresses	Address Ranges	BRC
Master Site	Calls	SDTS	Packet Data	Voice

Receive voice: 2 Interfaces

Voice Port Number: 10120

Voice Channel DLCI Table:

CH	DLCI
1	21
2	22
3	23
4	24

OK

Cancel

Help

Site Controller <Modified>

Network Management		Site Router		Site Link
General	Site Reference	Addresses	Address Ranges	BRC
Master Site	Calls	SDTS	Packet Data	Voice

Primary PVC DLCI: 16

Secondary PVC DLCI: 17

Primary PVC

Primary PVC BTS IP Address: PRIM PVC

Primary PVC Core Router IP Address: 0 . 0 . 0 . 0

Primary PVC IP Network Mask: 255 . 255 . 255 . 252

Primary PVC Recovery Timer (secs): 30

Secondary PVC

Secondary PVC BTS IP Address: SEC PVC

Secondary PVC Core Router IP Address: 0 . 0 . 0 . 0

Secondary PVC IP Network Mask: 255 . 255 . 255 . 252

Netcom Outbound UDP Port Number: 1050

Netcom Inbound UDP Port Number: 1051

OK

Cancel

Help

Site Controller <Modified> X

General	Site Reference	Addresses	Address Ranges	BRC
Master Site	Calls	SDTS	Packet Data	Voice
Network Management		Site Router	Site Link	

C RTP Enable: ☐

C RTP Context State Packet Time (ms): 250

C RTP State Session Timeout (ms): 1000

LMI Enable: ☒

LMI LIV Time (ms): 300

LMI Error Threshold: 3

Full Status Polling Counter: 6

Monitored Events Count: 4


Type Of Service Latency Time (ms): 5000

Frame Relay Fragmentation Size (Bytes): 100

OK Cancel Help

Site Controller <Modified> X

General	Site Reference	Addresses	Address Ranges	BRC
Master Site	Calls	SDTS	Packet Data	Voice
Network Management		Site Router	Site Link	

**MGR IP ADDR** 

Network Mgr IP Address:

Network Manager Port Number: 162

BTS Network Mgr IP Address: 10 . 101 . 1 . 4

Zone Manager Port Number: 161

Primary ZC Subnet Mask: 255 . 255 . 255 . 0

Secondary ZC Subnet Mask: 255 . 255 . 255 . 0

OK Cancel Help

- Once you're finished, double check everything. Save the file, and reconnect to the TSC (Connection ==> Connect Direct).
- Click on Connection ==> Send Files. Select "Configuration Files" and select the file you just saved. In the "File Download" window, enter a version label, check "Use Next" and

click on "Update Selected Items". Press OK to start the transfer. You'll get a prompt to select which configuration file to replace. Select the one with all the minus signs.

10. Remember when uploading the new configuration to update the "Use Next" Flag

12. Reset the TSC by issuing the "reset" command on the terminal. Wait for the reboot, and log yourself in again (with factory/factory)

13. Type the following commands to enable Site Link:

```
.sitelink -e1  
.e1config -crdStart 1 -crd 31 -ts16Skip off -portNo 1 -crc on  
reset
```

14. After reboot, your TSC should now be connected to the Core Network! Enjoy :)

## Final Steps

Once you have connected your BTS to the Core Network, Please go to <https://map.tetrapack.online> and register your user.

When an admin approves your user, you can log in and add your BTS to the map!

You will need the following information available when registering your BTS:

Zerotier Client ID: **you will get this when setting up your Pi for Either Cisco or FRED configuration.**

TX Frequency

RX Frequency

Duplex Table


Duplex Spacing

Once the BTS is approved by an Admin it will appear automatically on our BTS Map!

## Cable Management Mod for Option 1


I found it quite convenient to put the Pi inside the empty Primary Network Module slot. A small mounting plate with double sided tape, another one for the USB/Eth dongle, and it's already much cleaner!



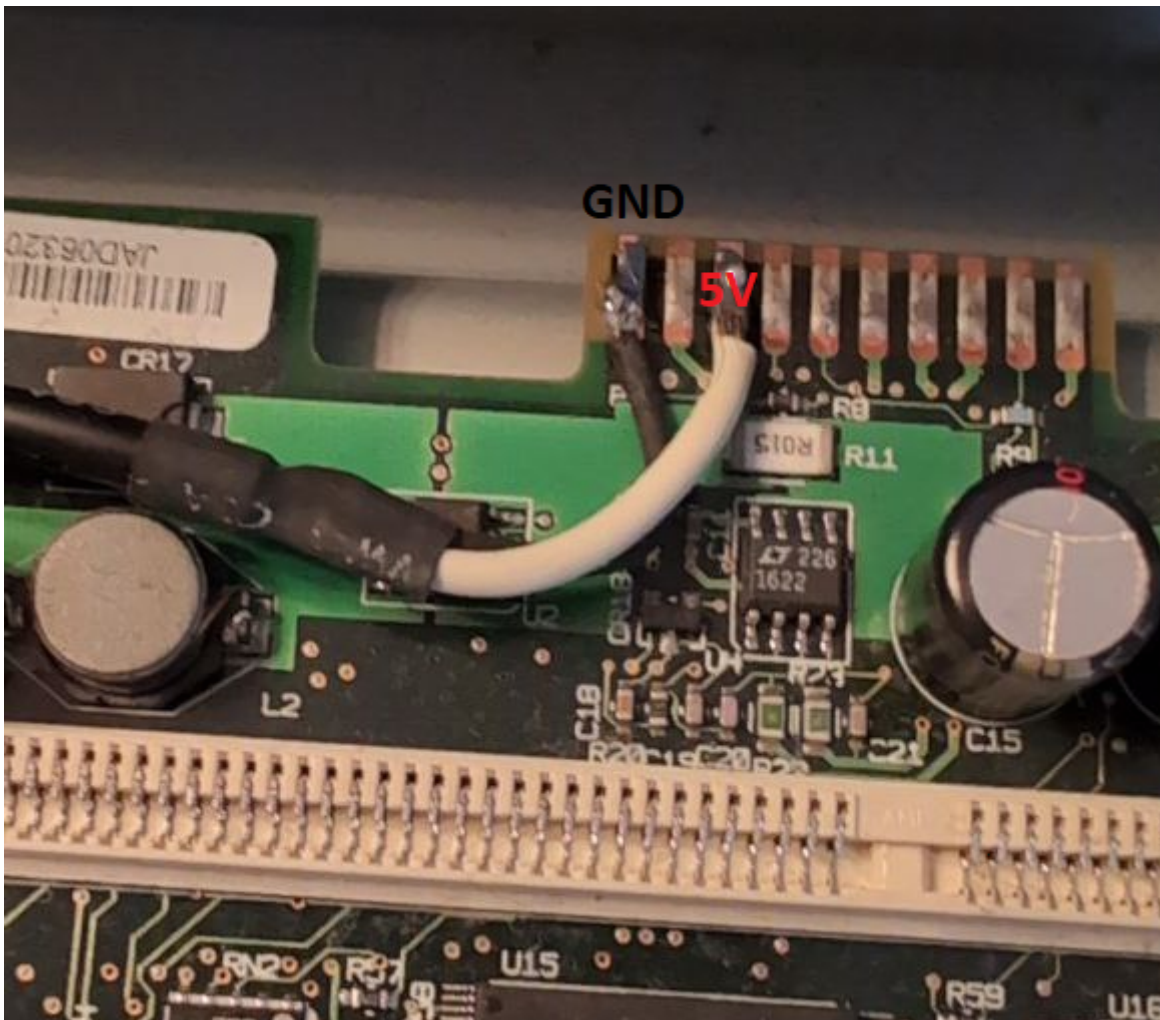

1	2	5V
3	4	5V
5	6	GND
7	8	GPIO14
9	10	GPIO15
11	12	GPIO18
13	14	GND
15	16	GPIO23
17	18	GPIO24
19	20	GND
21	22	GPIO25
23	24	GPIO8
25	26	GPIO7
27	28	GPIO1
29	30	GND
31	32	GPIO12
33	34	GND
35	36	GPIO16
37	38	GPIO20
39	40	GPIO21

Pins 2 and 6 on the Pi can respectively be used as 5V and GND. An old servo connector does the job quite well!

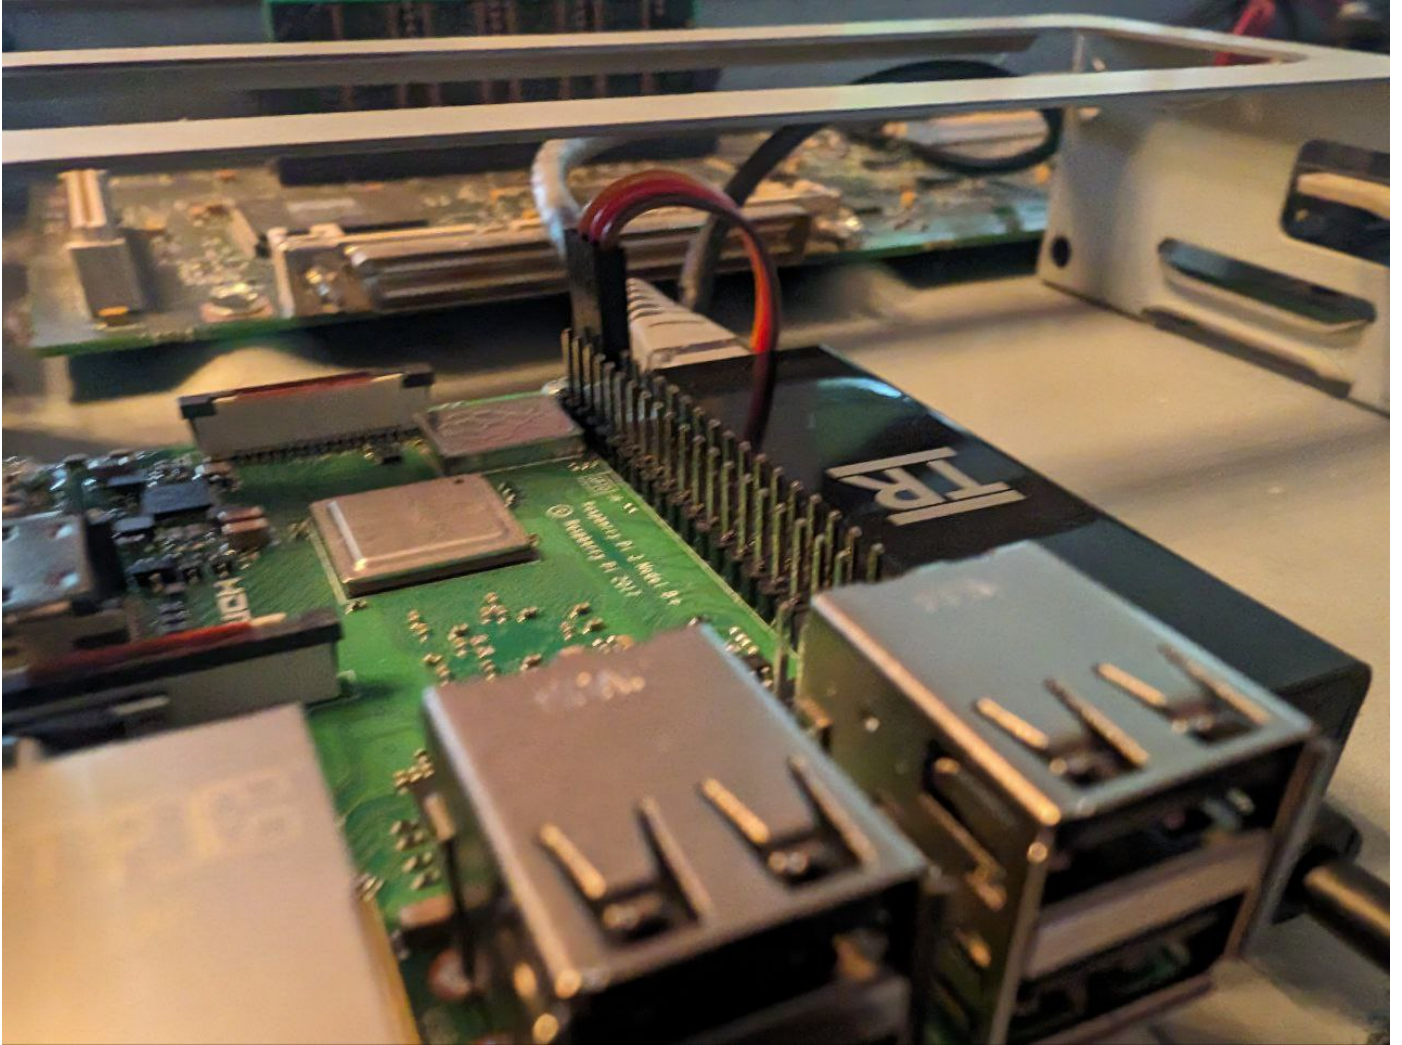

# Dummy

## Intro

- Gateway software to run on on-site E1 connection (see article [E1/T1 Interface](#))
- Transmits application-level messages between CTS E1 and TetraPack Core
- Decodes/encodes full signalling stack:
  - E1 handler \
  - HDLC FSM - (normally done by IC on BSC411 board)
  - Q.921 FSM /
- Inter-site Connect transport including priority management (normally done by ISCD2.EXE)
- Decodes/encodes E1 and pre-buffer carrier streams (normally done by BSC411/TR412 boards)
- Partially emulates BSS.EXE/GWS.EXE (presence / status updates)
- VTUN over E1 between CTS and host (does not forward to the server)
- Uses the same bss3.txt configuration file as a base-station
- Has additional D-BUS API to pass specific data types such CTS logs to the server
- Debian 11 arm64 or amd64, tested on Raspberry Pi 3\*, CM4 and Intel x64 PC
- Typical IP bandwidth 4-100 Kbits/sec

\* Some revisions of Raspberry Pi 3 have issues with icE1usb connection stability due to USB NIC

[P2-TP-Feb2023.pdf](#)

## Configuration

Default configuration file is /opt/TetraPack/default.env

```
# E1D interface and line in format [interface number].[line number]
DUMMY_LINE=0.0

# Path to CTS topology file (bss.txt or bssparams.txt)
DUMMY_TOPOLOGY=/opt/TetraPack/bssparams.txt

# IP address and mask for CTS VTUN interface
```

```
DUMMY_NETWORK="192.168.0.8 mask 255.255.255.0"
```

```
# Specific options (multiple values can be delimited with comma):
```

```
# replace-forwarded-link-status - replace IP-forwarded status for both E1 lines status of local BSs/GWPC to up
```

```
# emulated-bs-line1-down      - set E1-1 status of emulated BS to down
```

```
# emulated-bs-line2-down      - set E1-2 status of emulated BS to down
```

```
# emulated-gwpc-line1-down    - set E1-1 status of emulated GWPC to down
```

```
# emulated-gwpc-line2-down    - set E1-2 status of emulated GWPC to down
```

```
DUMMY_OPTION=
```

```
# Server connection URI in format http(s)://[user]:[password]@[address]/[path and parameters]
```

```
# If you care about securely stored password, please put credentials into /opt/TetraPack/.netrc (man netrc)
```

```
DUMMY_CONNECTION="http://xxxxxx:password@core.tetrapack.online:8081/dummy/?emulation=bs+gwpc"
```

```
# Instance name for D-BUS IPC interface
```

```
DUMMY_INSTANCE=default
```

## Connection URL

Parameters:

- emulation
  - bs - tells Core to emulate basestation, required to deliver group and private calls. Emulated basestation will use ID from topology file (*/base-station/base-station-id*)
  - gwpc - tells Core to emulate GWPC, required to forward SMS, location, etc. Please don't use if you have GWPC on-site

## Topology

bssparams.txt is used to map CTS system topology and E1 layout as well as a system configuration. Parameter */base-station/base-station-id* is used as identifier of emulated basestation (identifier of GWPC is hardcoded in CTS).

A capacity (amount of concurrent calls) of emulated basestation depends on amount of configured virtual transceivers for this basestation. Capacity = [count of transceivers] \* 4 - 1

Please keep in mind that due to specific of CTS system topology must be configured as a chain of nodes, connected end-to-end. For example if you have two physical BSs, topology file has to be configured in scheme BS1 <-> BS2 <-> emulated BS <-> emulated GWPC. Regarding to this scheme you have to have properly configured termination endpoint in the main configuration (.env):

```
# emulated-bs-line1-down      - set E1-1 status of emulated BS to down
# emulated-bs-line2-down      - set E1-2 status of emulated BS to down
# emulated-gwpc-line1-down    - set E1-1 status of emulated GWPC to down
# emulated-gwpc-line2-down    - set E1-2 status of emulated GWPC to down
DUMMY_OPTION=emulated-gwpc-line1-down
```

# Multiple instances

You can have several separated CTS systems connected to one or more core servers (for example, production and test). For such case you need to have several .env files for each configuration. use *sudo ./setup.sh install* to register all instances.

Also it's possible to run dummy in command line - *sudo ./run.sh <configuration.env>*

# CTS Log Collector

CTS Log Collector is an additional software for [Dummy](#). It connects to CTS basestation via TCP to logging ports and forward log entries to locally installed dummy.

## The need

CTS Log Collector does following important things:

- gets GSSI attachments (Scan List) information from logs and passes to the core - required to manage group routing (no such data in signalling)
- passes log to logging server to simplify analysis of issues

## Configuration

```
# [IP of basestation] [dummy instance name] [basestation ID (1-8)]  
COMMAND_ARGUMENTS=10.0.0.1 default 1
```

# MTS

Motorola's MTS Series of Tetra Base Stations are currently supported in TetraPack.

## Installation

```
curl http://packages.tetrapack.online/install/tools/MTS/mts-setup.sh | sudo bash
```

# CTS Updater

CTS Updater (update-cts.py) is a small script to upload and update CTS configuration or database remotely and without restart. Better to run it on the same Linux system where dummy runs.

Utility creates index data, starts specific embedded ftp server, connects to CTS and initiates update. After updating it stops.

## Installation

```
sudo apt install python3-pip python3-pyftplib  
sudo pip install telnetlib3
```

Please make sure, you don't use firewall between your CTS and Linux. Also please make sure you have no ftp servers run on Linux system or use port TCP 21.

## Usage

```
$ sudo ./update-cts.py <IP-address of CTS> [db|cfg] <path to folder>
```

Exit codes:

- 0 - Success
- 1 - Error on Linux system
- 2 - Error on CTS system

## Update database

```
$ ls db1/  
sum-gm.csv sum-gp.csv sum-sc.csv sum-sub.csv  
$ sudo ./update-cts.py 10.2.0.10 db db1 ; echo $?
```

## Update configuration

```
$ ls -l cfg1/  
bssparams.txt  
$ sudo ./update-cts.py 10.2.0.10 cfg cfg1 ; echo $?
```

# CTS

Motorola CTS-x00 is a series of basestations for CompactTETRA product line of Motorola. Literally its OEM-product of DAMM with software from Frequentis.

Following articles is about how to connect it to TetraPack:

- [Setting up Dummy and LogCollector](#)
- [Dummy](#)
- [E1 Interface](#)
- [CTS Log Collector](#)
- [CTS Updater](#)